


Recessed Handle Installation Instruction Sheet

# PC-366

\* Please be sure to read before installing product.

\* Do not dispose the installation sheet after installation, instead please pass it to the product user.

## PC-366 Notch Dimension

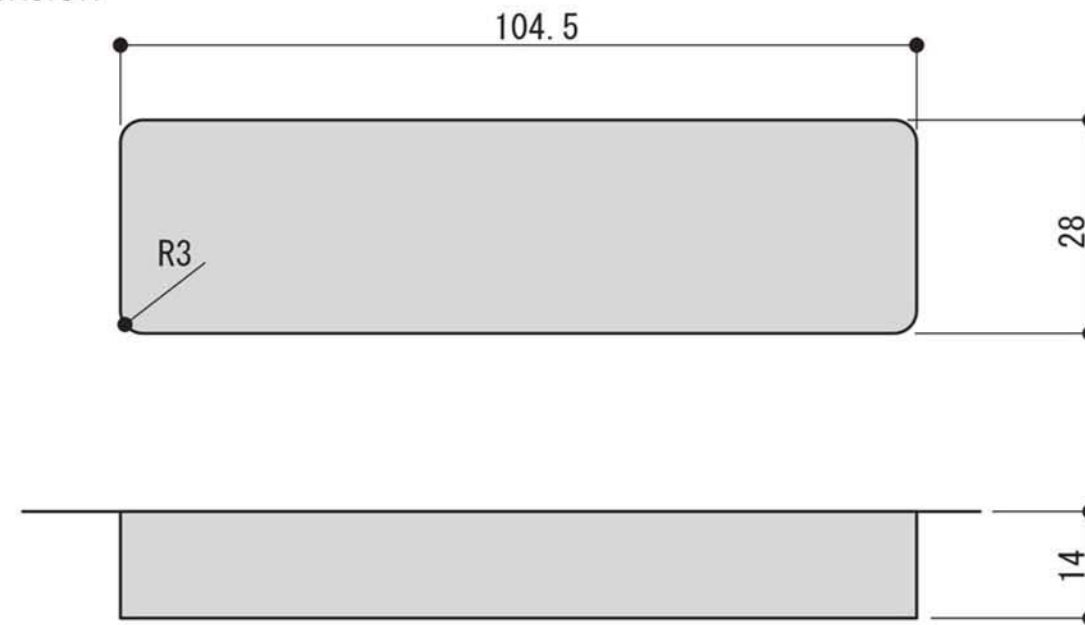

### ⚠ Caution: About installation

\* Product will be loose if installed in a notch that is bigger than what is stated.

\*\* Do not install product onto a hollow door.

\* Although this is the recommended dimension, do note that adjustments may be needed depending on the material of the door.

\* After installation, please check to ensure product has been installed securely.